


BETHANY Hydraulic Facial Chair

Model# HZI-FCCHR-216



ATTENTION! PLEASE READ THESE INSTRUCTIONS BEFORE USING THIS DEVICE

PRODUCT MANUAL

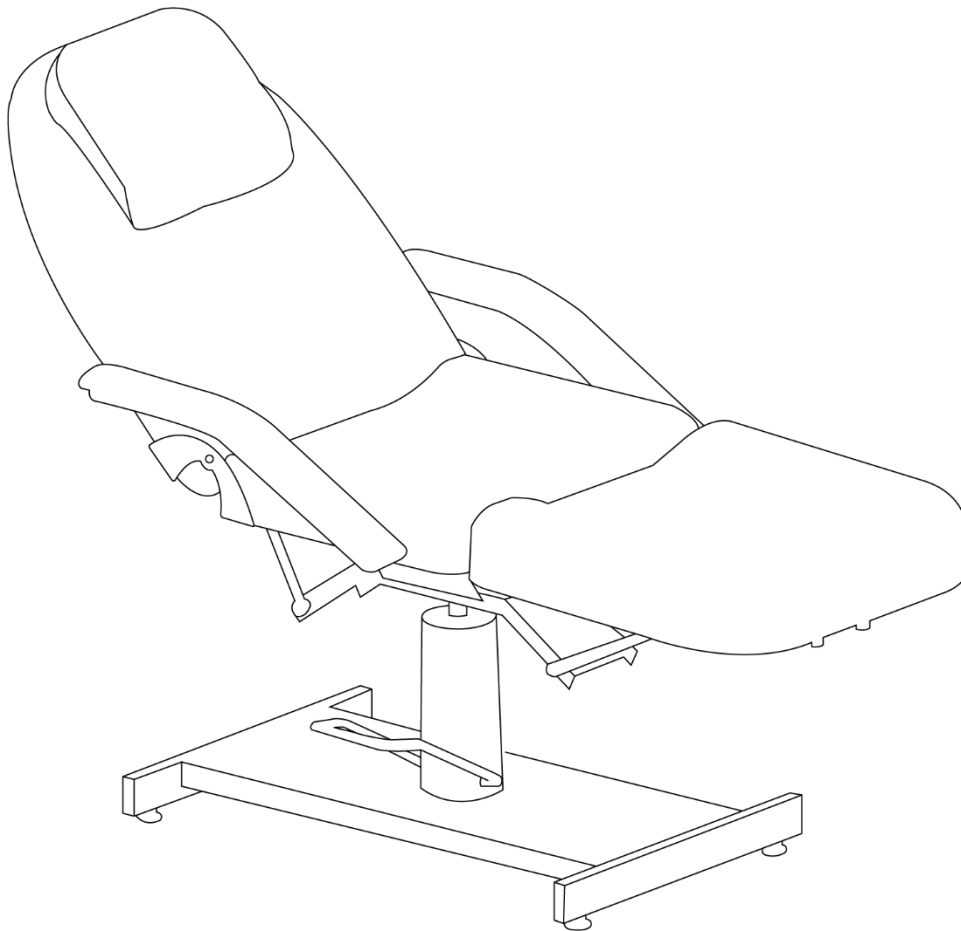

NOTICE:

If your package is missing parts or you are having issues with installation, please call us directly. Our customer service team will address any questions or concerns you may have.

Have this manual open and ready for reference.



SAFETY


To reduce risk of injury when installing & using the chair, follow these precautions:

- Read all these instructions before installing and using your salon chair.
- Preferably have 2 people for installation and turning the chair upright after installing.
- Do not over-extend the bed. The weight of the client should not exceed 150 kg, to avoid creating the risk of falls or tipping the chair, resulting in injury

OTHER ITEMS YOU WILL NEED (not included)

- Hand Tools: Wrench, Rubber Mallet, Screwdriver (Phillips), a Sturdy box

PARTS & FEATURES

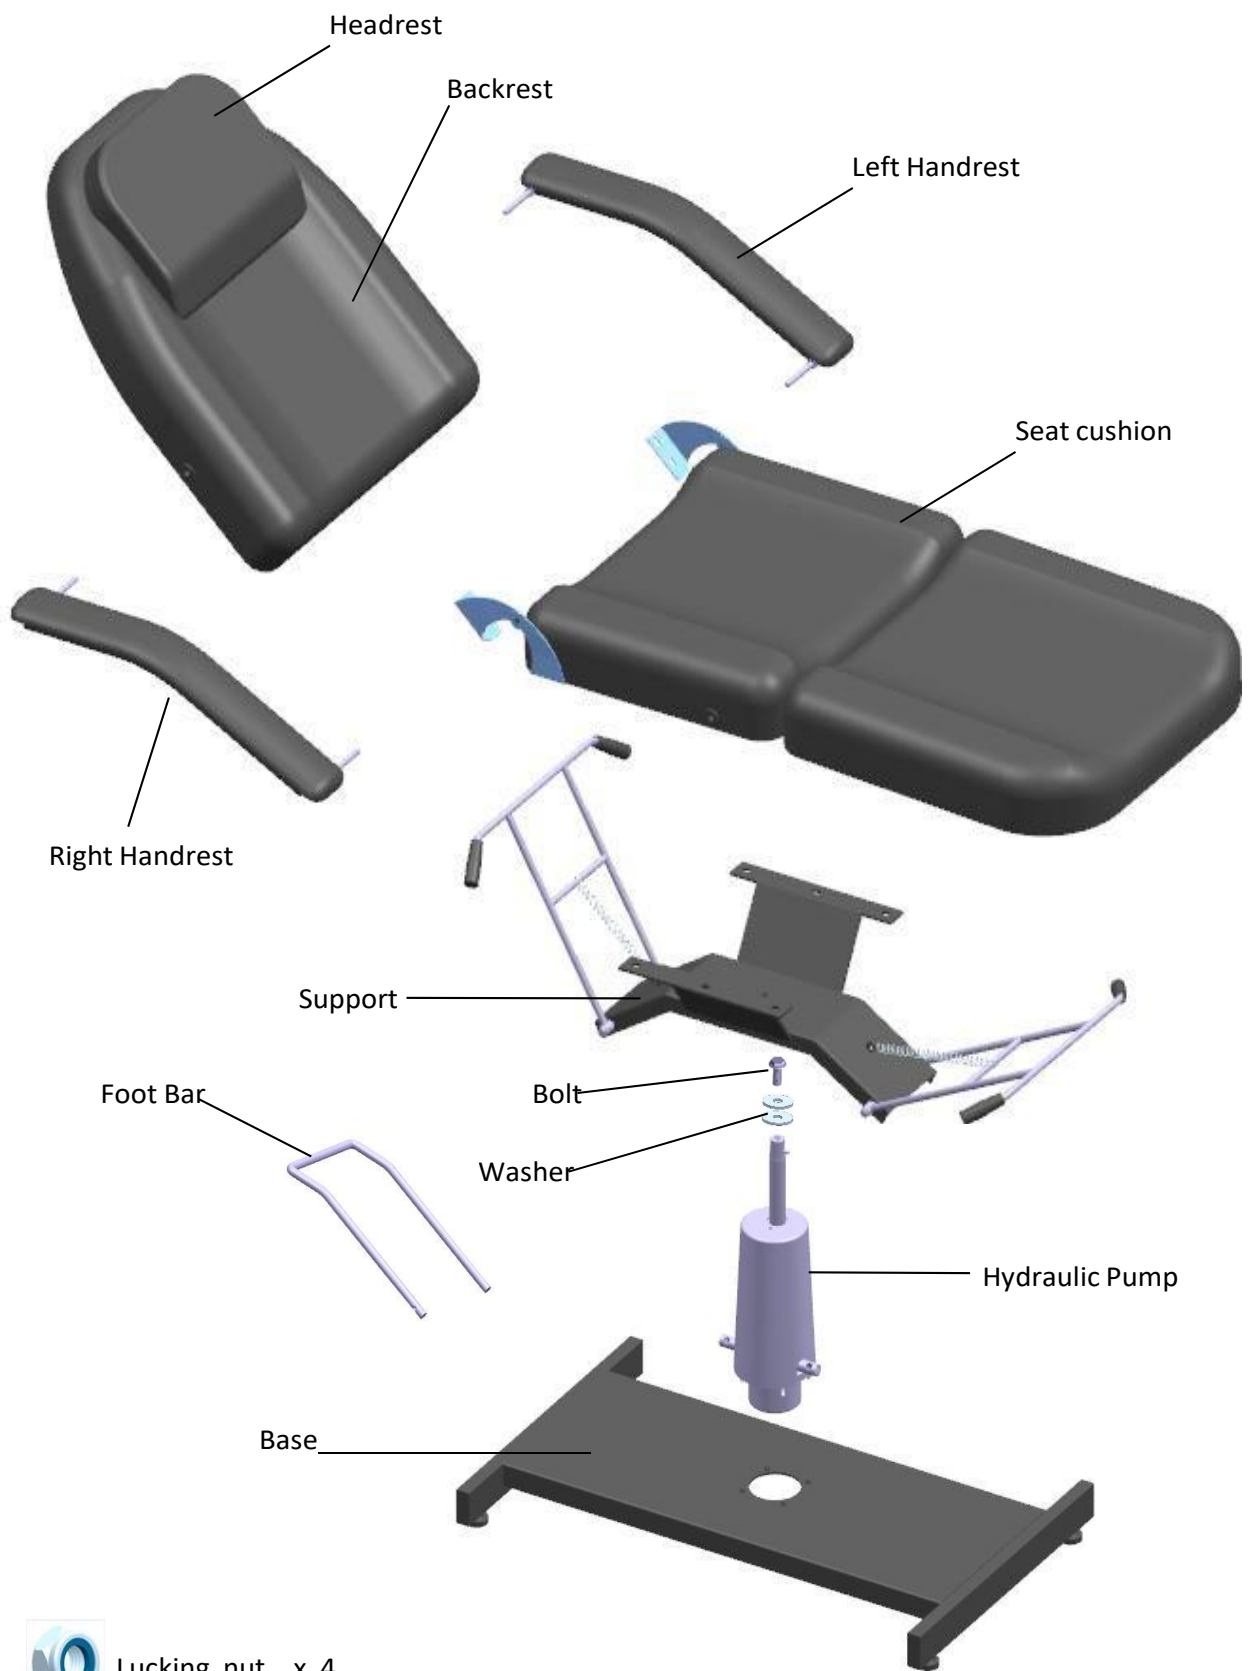

Locking nut x 4




Allen wrench x 1

Installation instruction


1st Step: Install Pump to Base

1. Install the pump to the base by inserting 4 bolts and tightening the nuts on the opposite side.

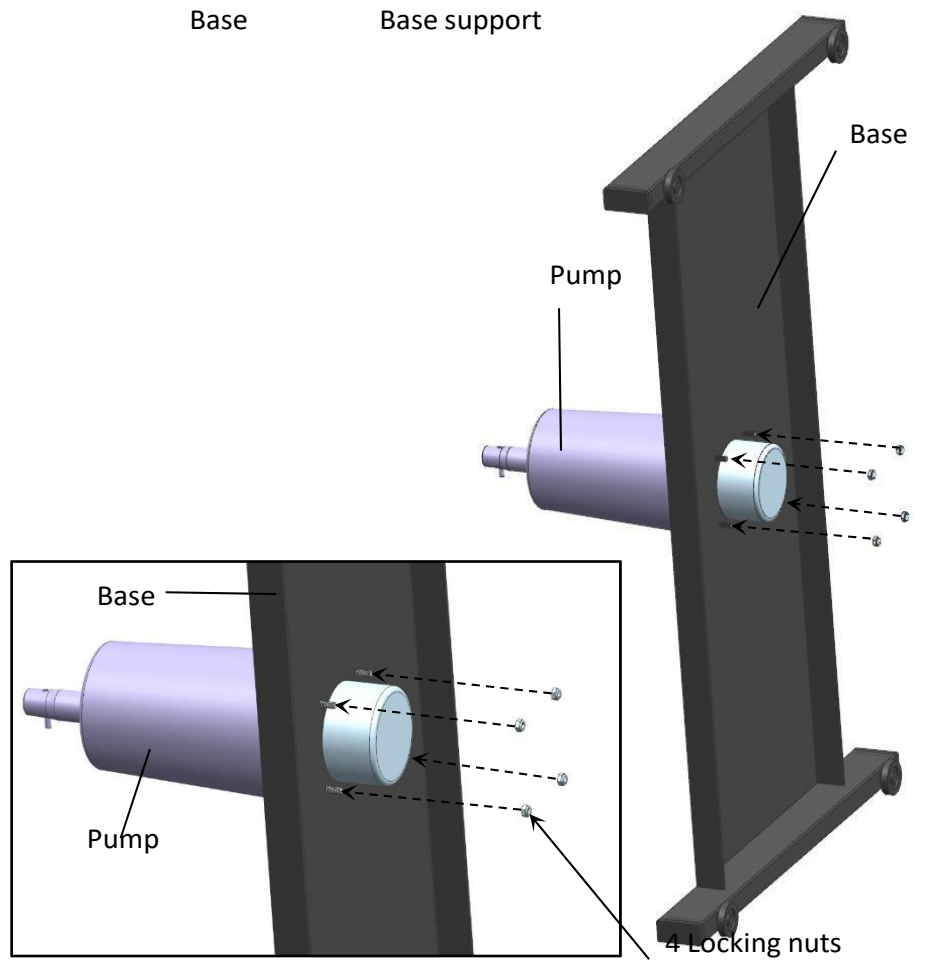


2nd Step: Install Foot Bar to Assembled Hydraulic Pump & Base

2. Remove the 2 screws which are pre-fixed on pump.
3. Install foot bar to pump with an Allen wrench using the two screws removed from the pump.

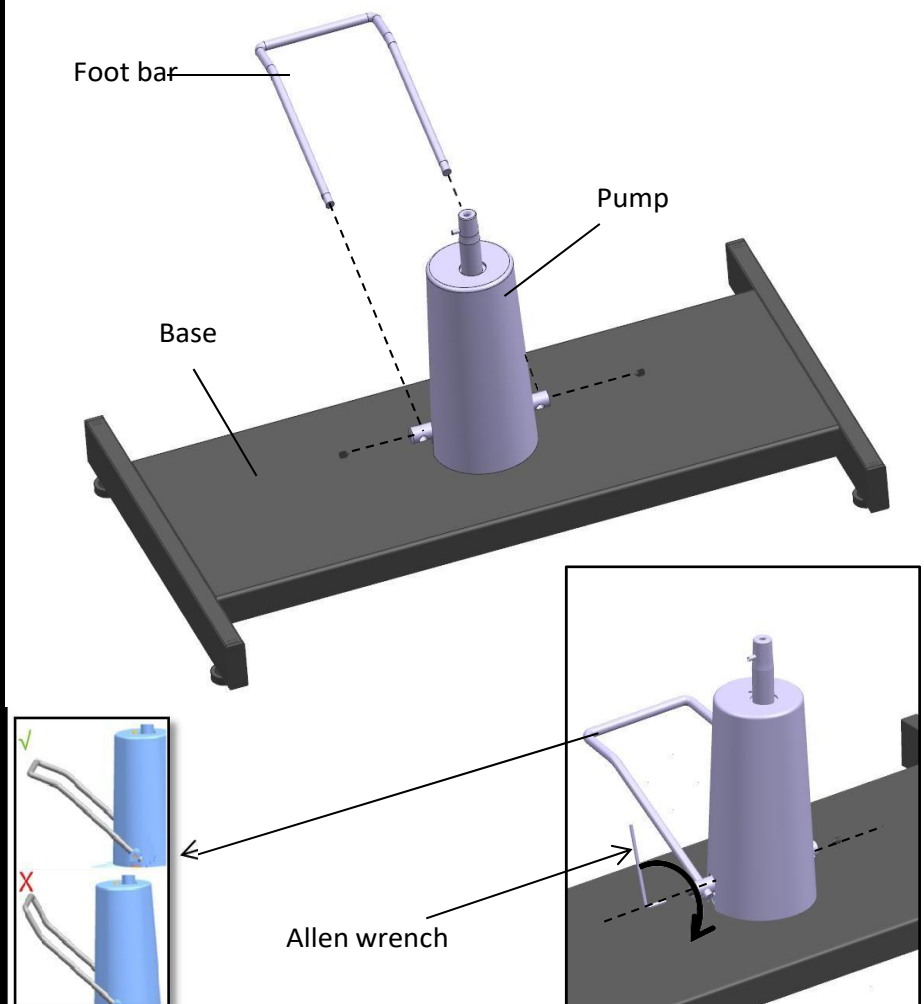




**3rd Step: Assemble
backrest to seat cushion**

4. Remove the 4 bolts which are pre-fixed to the backrest.
5. Install the backrest to the seat using the 4 bolts removed from the backrest.

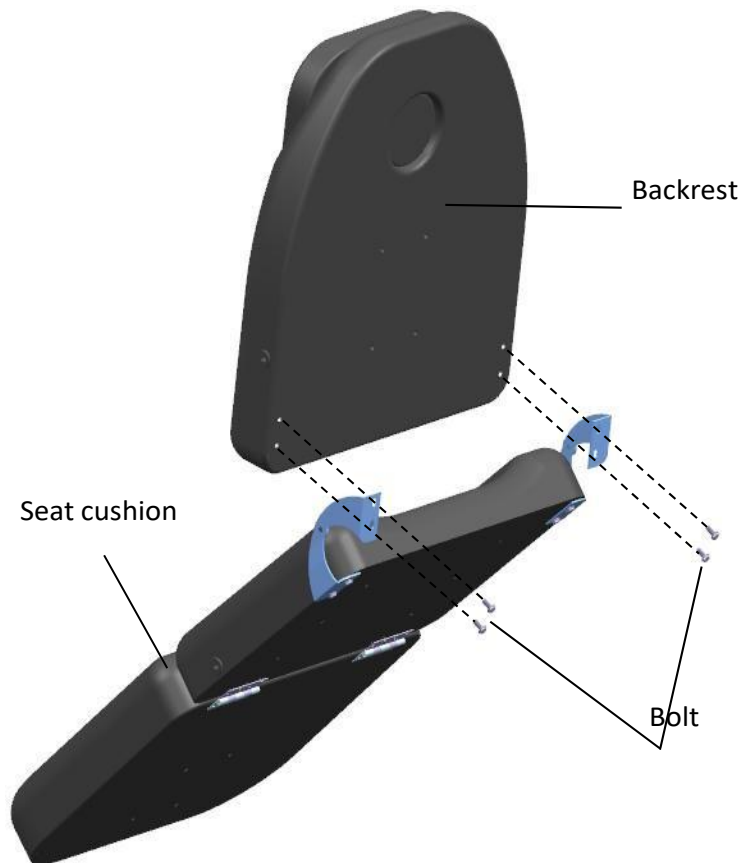



**4th Step: Install support to
Seat cushion**

6. Remove the 6 bolts which are pre-fixed to the seat
7. Install the support to the seat using the 6 bolts removed from the seat

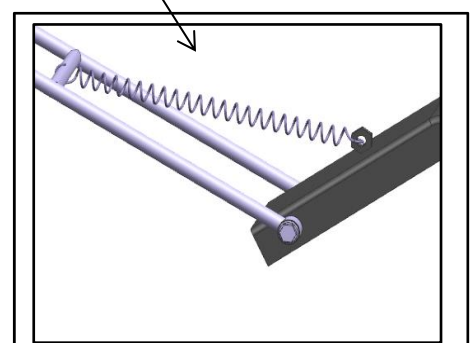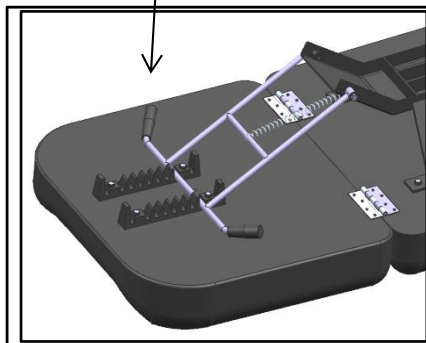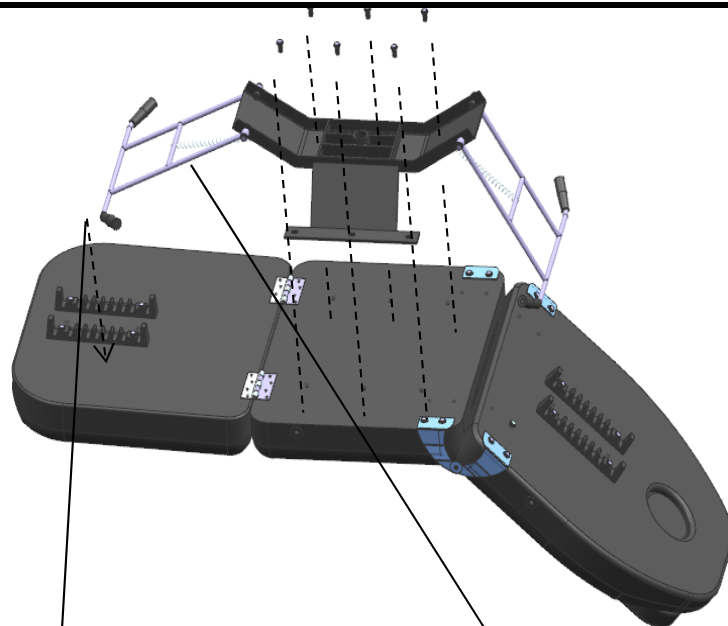


5th Step: Set Seat & Backrest onto Hydraulic Pump & Base

8. Locate the slot in the short column under the Seat. Align this slot with the black pin at the top of hydraulic pump.
9. Set assembled seat & backrest onto the assembled hydraulic pump and base.
10. Insert threaded bolt through the hole of support and screw into hole on top of pump and tighten until firm.

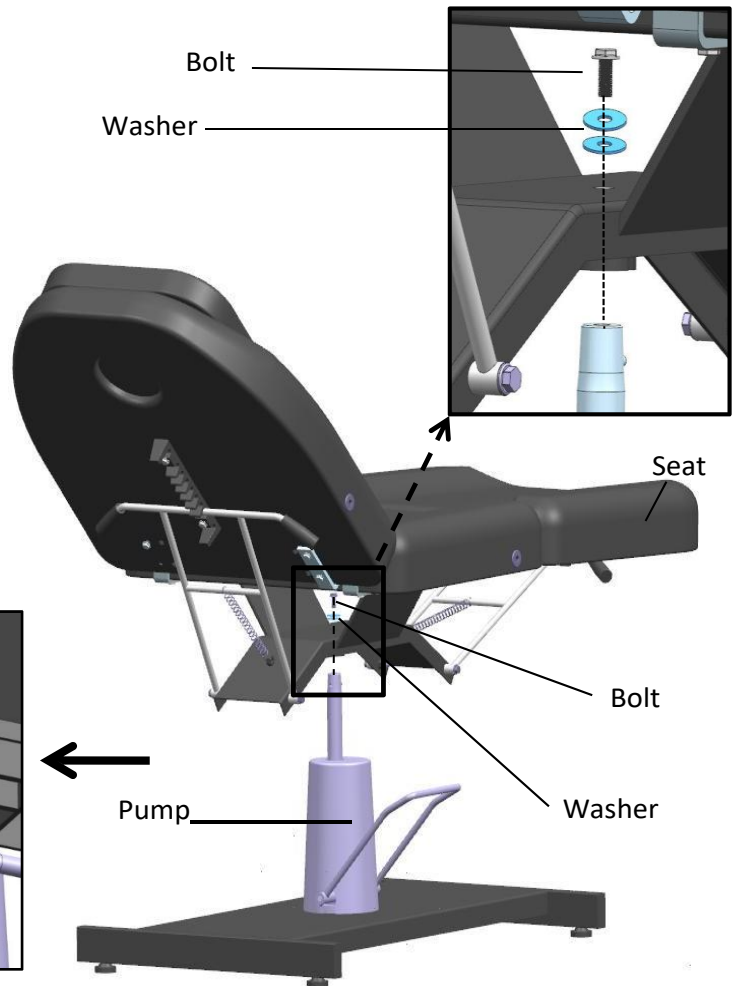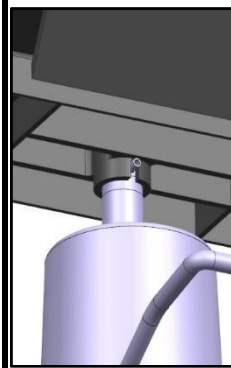

6th Step: Install armrest(F) to the backrest(B) and seat cushion(A)

11. Put the chair up-right
12. Insert the two armrests to the holes on each side of the chair.

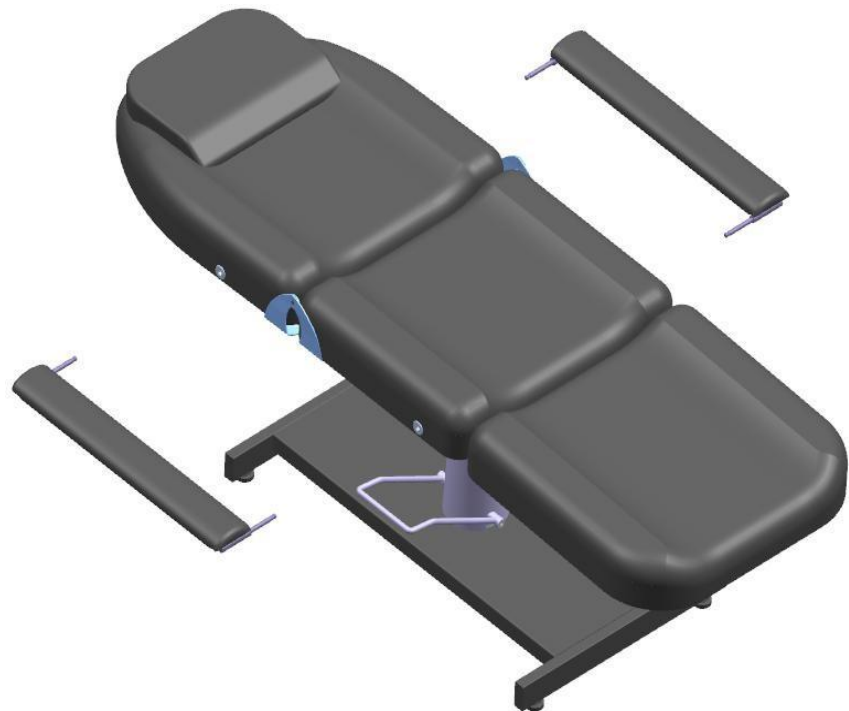

Operation The Chair

Raising and lowering the Chair

1. Step down on the Foot Bar repeatedly to raise the chair to the desired height.
2. Do not over-extend the chair. This creates the risk of falls or tipping the chair and its occupant over, resulting in injury
3. Step down and hold the Foot Bar down to allow chair to lower.
4. Hold the Foot Bar up to lock the chair.



Recline the Backrest and the Seat cushion

Adjusting the support bar on the back of the seat, and the underside of the leg section, will allow you to adjust the incline to your desired level. Please make sure that the support bar fits well into grooves for any adjustments before use.

Notice!

Do not over-extend the chair (0~150kg), creating the risk of falls or tipping the chair and its occupant over, resulting in injury

When moving the adjustment support rod, it must not exceed the gear on both sides of the rack

