




## UV TOWEL WARMER MANUAL

ITEM: MSI-TWAPP-141 & MSI-TWAPP-142

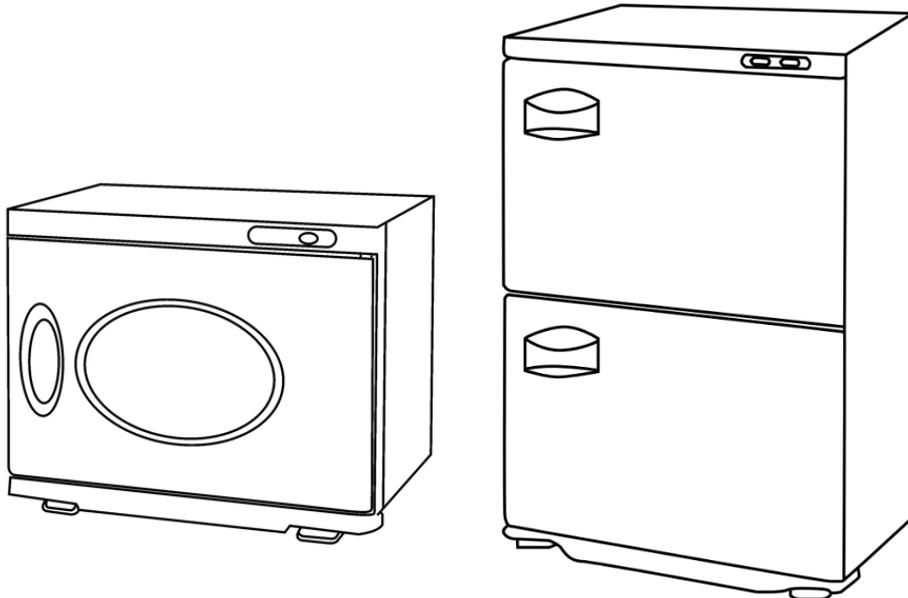

**Thank you for purchasing our Dermalogic UV Towel Warmer. To use this product safely and correctly, please read this manual carefully and abide by all directions and notes.**



## Operating Instructions

---

- Place the towel warmer on a level, stable and well-ventilated place with low temperature and little movement, and always keep it away from water.
- Use a grounded outlet to prevent electric shock.
- Confirm that the power switch is “OFF” and then firmly insert the plug to the socket.
- Moisten towels before placing them in the towel warmer to be heated. Towels should be moist but not dripping wet.
- Take the rack out of the warmer and fold or roll the moist towels neatly and then place them on the rack. Do not place too many towels; to prevent them from making direct contact with the warmer.
- Close the door firmly and turn the power “ON”. The red indicator light will come on and the unit will begin to heat, and UV light will be on simultaneously.
- **For double UV towel warmer, please note that the right button controls the temperature and UV for upper cabinet and the left button controls the temperature and UV for bottom cabinet.**
- Please note that this unit has an auto-shutdown feature. When the temperature reaches its maximum, the power will automatically turn off. Once the temperature lowers again, the machine will power back on.

## Safety Precautions

---

- Towels may be too hot to apply immediately, and caution should be used before applying to the body. Remove towels with tongs or heat-resistant gloves.
- Do not open the unit if it hasn't reached the preset temperature.
- Turn the power OFF when the unit is not in use or needs to be cleaned.
- Check drip tray at the bottom of unit after each use, and empty if any water has accumulated.
- Keep out of reach of children.

## Maintenance

---

- 1) Turn the power switch “OFF” and unplug the unit from the outlet.
- 2) Once the machine has cooled, take out all towels from the warmer.
- 3) Empty the water tray.
- 4) Wipe the inside of the warmer with a dry towel. If it is difficult to remove the stain or grime, add a little neutral detergent on a piece of cloth to wipe it out. Do not use a solvent such as polish thinner and the polishing powder.
- 5) The rack can be washed with water after removing it from the warmer.
- 6) Open the door and ventilate the inside of the warmer.

## Specifications

---

Model NO.	Capacity	Wattage	Voltage	Frequency	Temperature	Dimension
MSI-141	18L	200W	110V	60Hz	158+50°F	18" x 14" x 11"
MSI-142	36L	400W	110V	60Hz	158+50°F	19.5" x 11.5" x 25.5"